


Instructions listed for each model number:

E6420 - Location: Right side of laptop

OFF: Right (toward screen) wireless is Off.
You will see red next to the switch.



ON: Left (toward you) wireless is On.

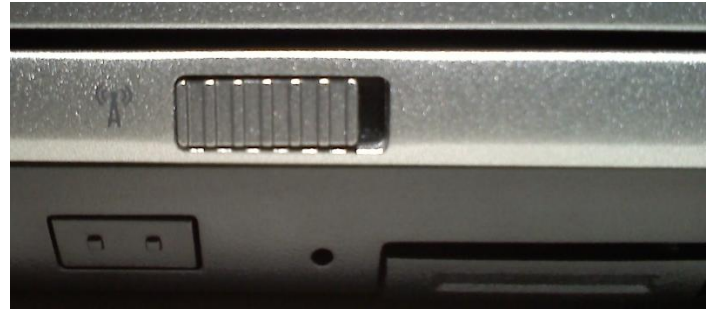

E6400 - Location: Right side of laptop

OFF: Right (toward screen) wireless is Off.
You will see red next to the switch.



ON: Left (toward you) wireless is On.



D620 and D630 - Location: Left side of laptop

OFF: Left (toward screen) wireless is Off.



ON: Right (toward you, switch is towards antenna) wireless is On.



D610

Press Fn and F2 (on keyboard) at the same time.
Repeating this will toggle the wireless Off and On.

The green light above your keyboard that says WIFI
(2nd icon in picture)

OFF: Light will be Off when wireless is Off.

ON: Light will be On (lit green) when wireless is On

